HAC-701

HD AI Camera

IP Quick Setup



Publication Date: March 2025

Preparing the Camera



Wiring the Network




Use a network cable to connect the testing computer to the HAC-701. At the same time, confirm that the network port indicator lights on the HAC-701 are on and that the front power indicator light is lit.

Preparing the Computer Before Setup

Test computer network settings




Click Network and Internet Settings according to the instructions.

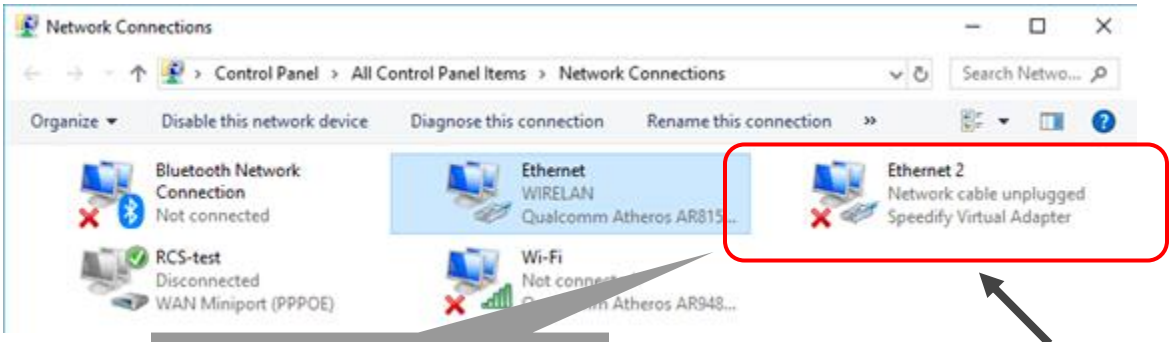

Find the network settings you want to connect to the camera.


Preparing the Computer Before Setup

Test computer network settings

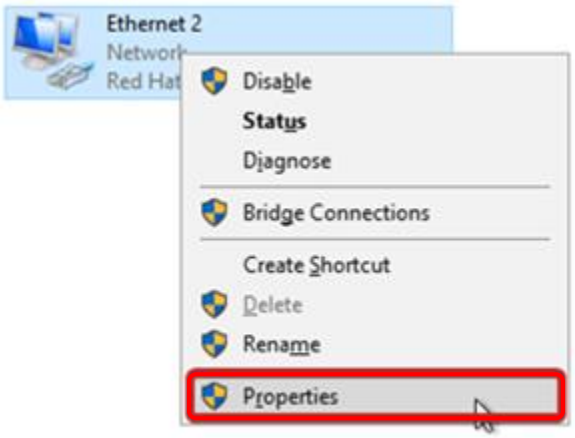

After right-clicking, click Content.

1

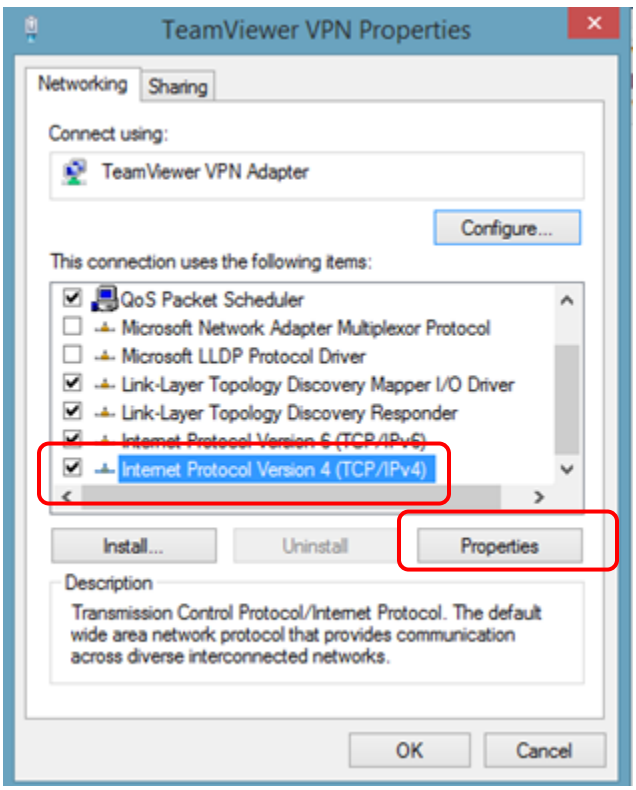


2

Click Internet Protocol Version 4 (TCP/IPv4), and then click Properties.

Preparing the Computer Before Setup


Test computer network settings

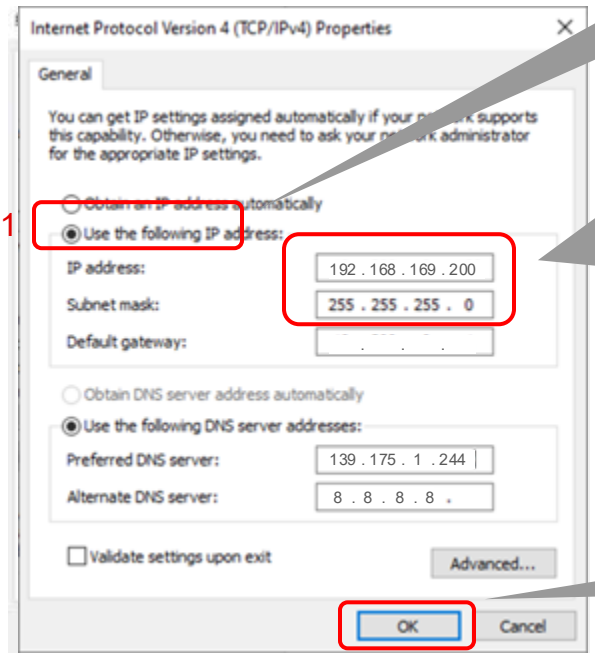

Click Use the following IP address, and then click Advanced.

Added,
IP address is set to: 192.168.168.XXX network segment
(Here, 192.168.168.200 is used as an example)
Subnet mask is automatically imported into 255.255.255.0.

Click OK.

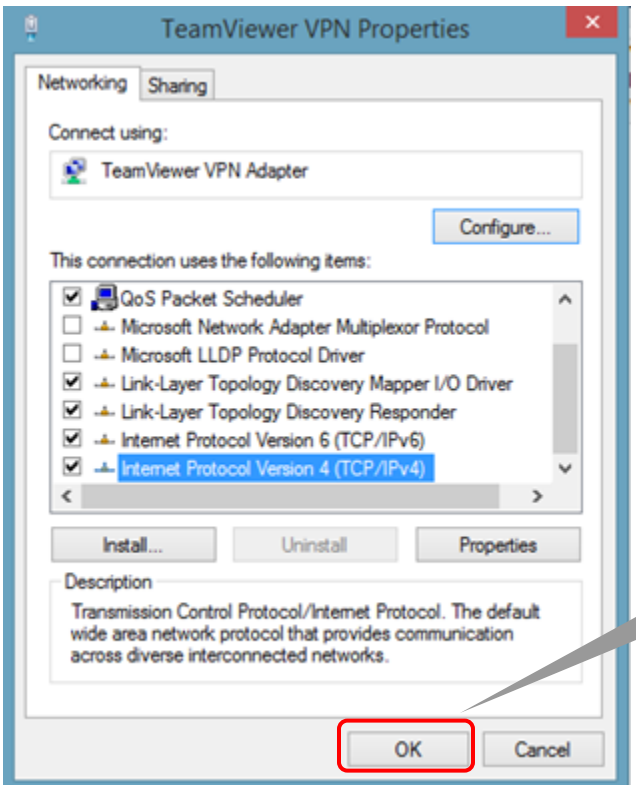


Click OK.

Change the IP Address of the Camera

Open a web browser


Enter the default IP address of HAC-701 192.168.168.160 in the URL field and confirm that you can log in to the WEB page using the account admin and password 00000.

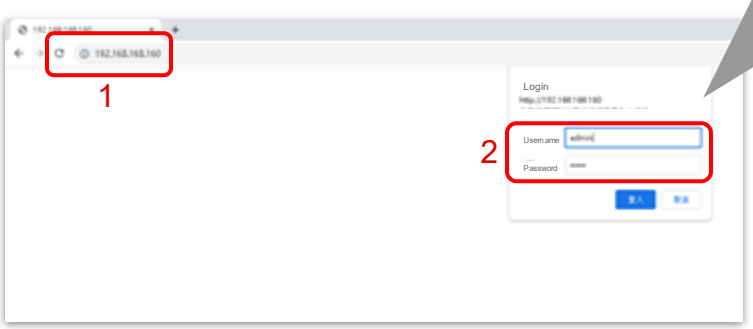




After logging in, click Network Settings in the left column, and then click Manually Set IP in IP Search.


Change the IP Address of the Camera

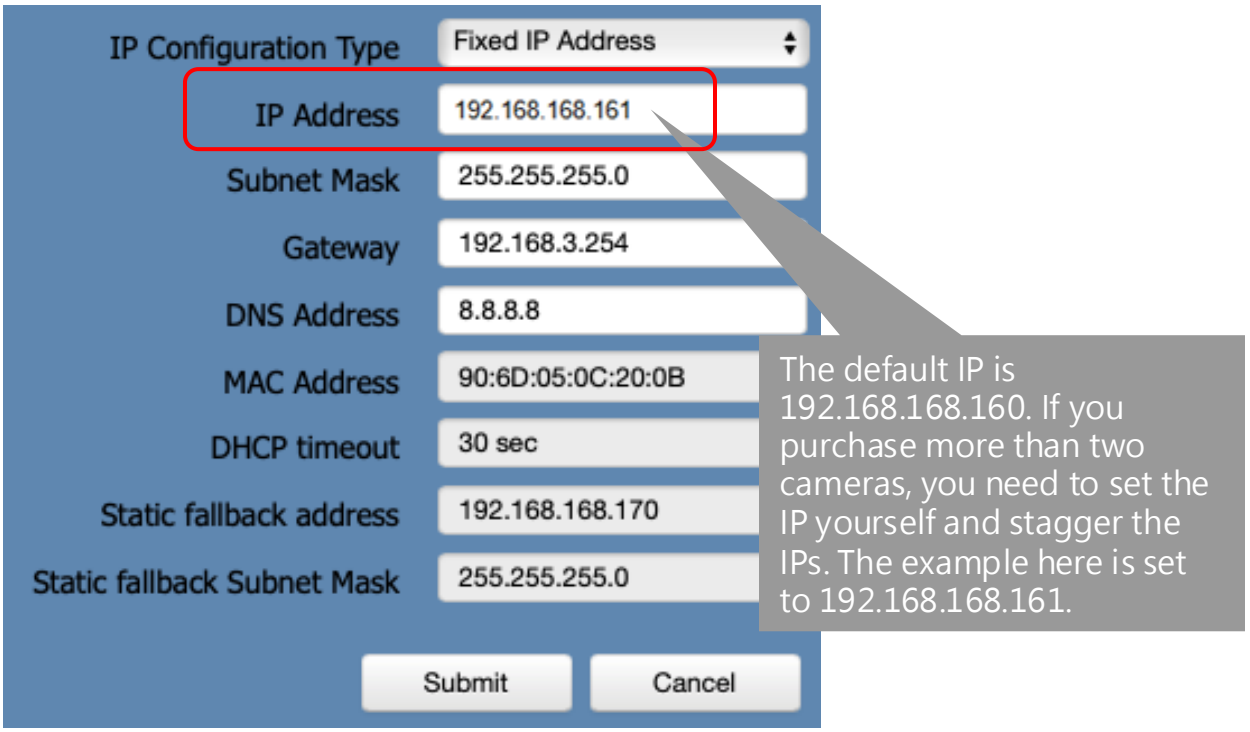

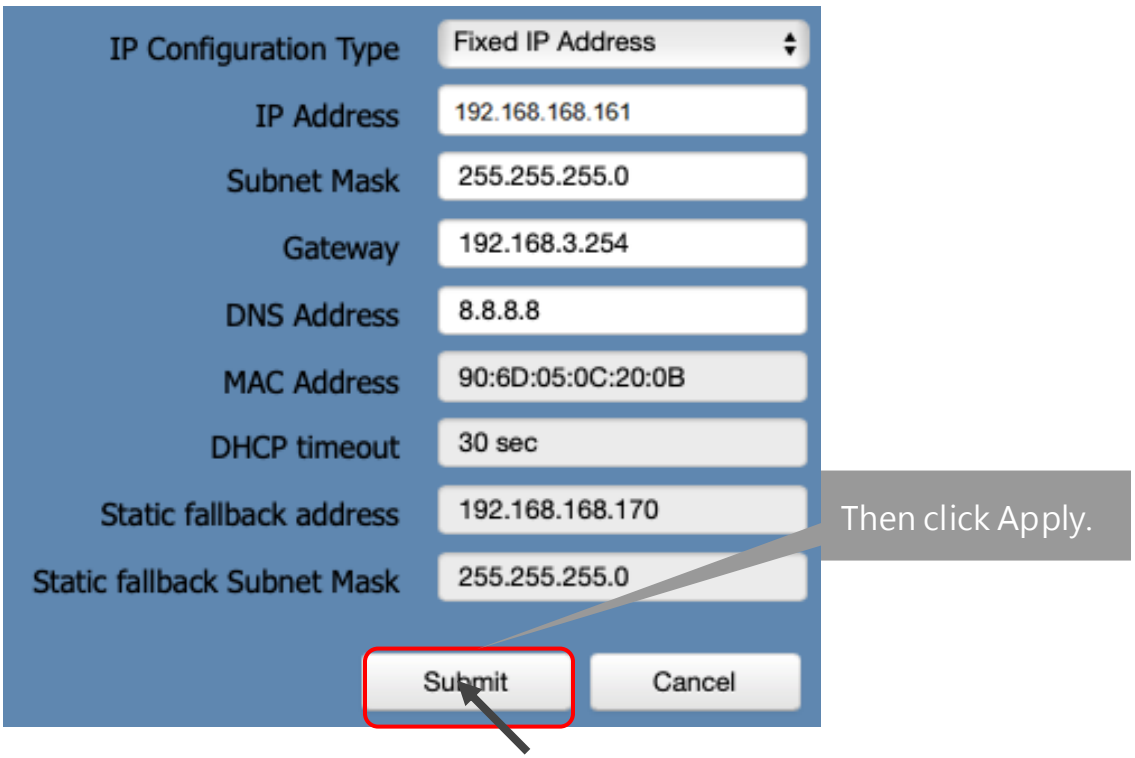


Change the IP Address of the Camera

At this time, a prompt message pops up in the lower right corner of the screen, indicating that the local network setting data has been modified successfully.

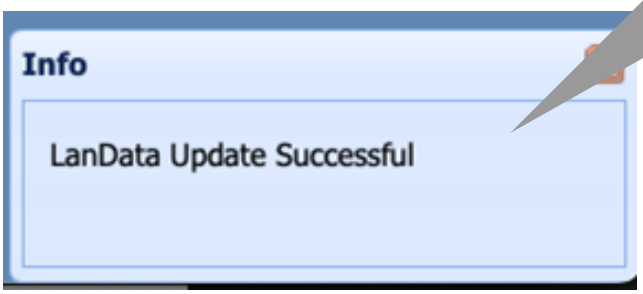



Enter the modified IP and refresh the screen to confirm that the camera IP has been modified.

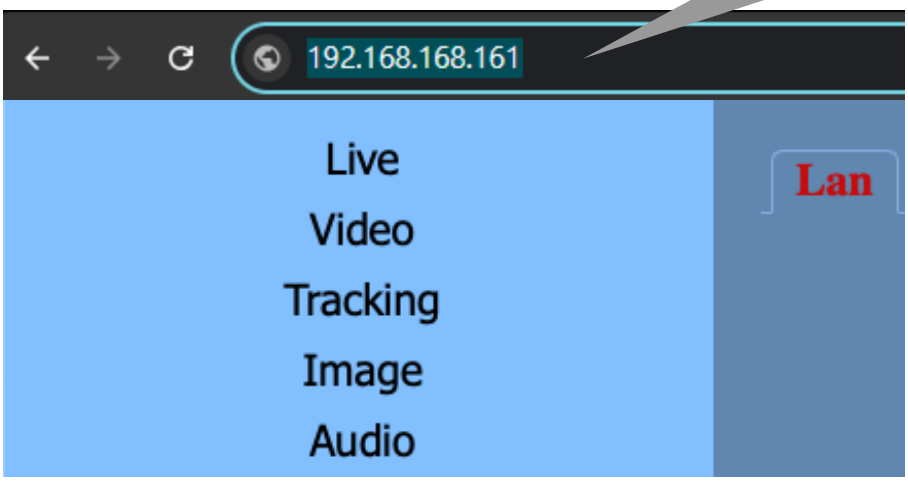


Change the IP Address of the Camera

Then click System in the left column, and then click Reboot.

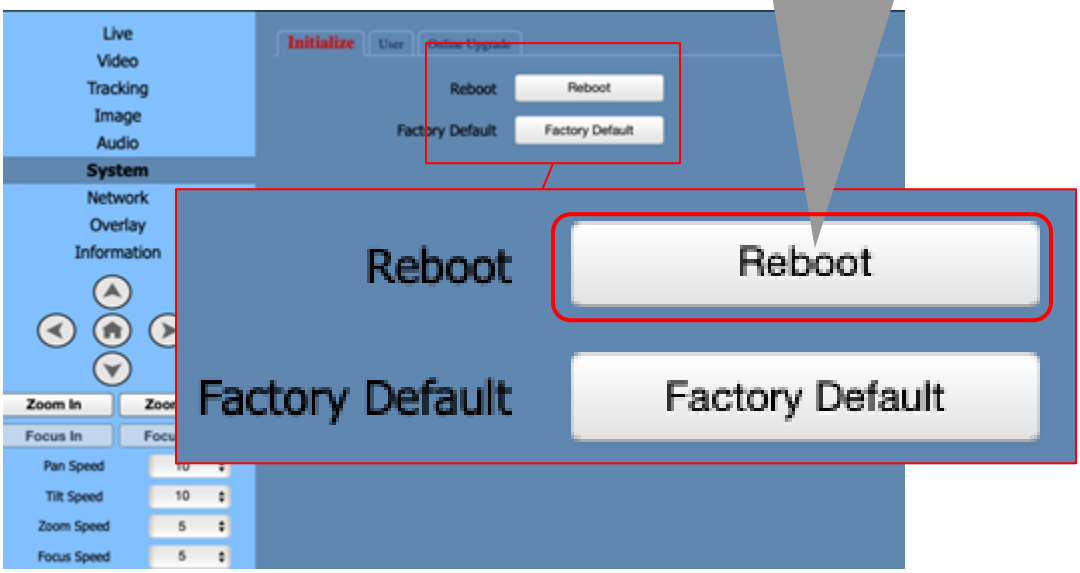

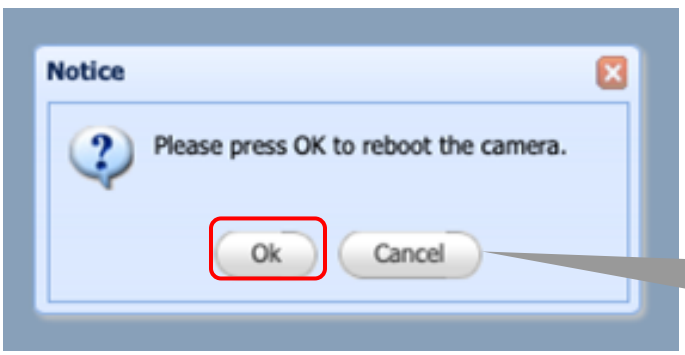


A prompt pops up to confirm whether to restart the device now and click OK.

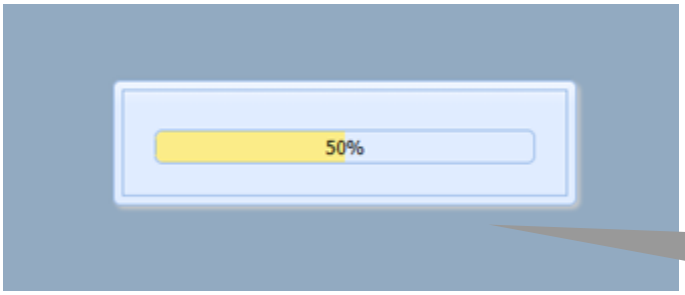


The progress % of restarting the device will be displayed.

Change the IP Address of the Camera

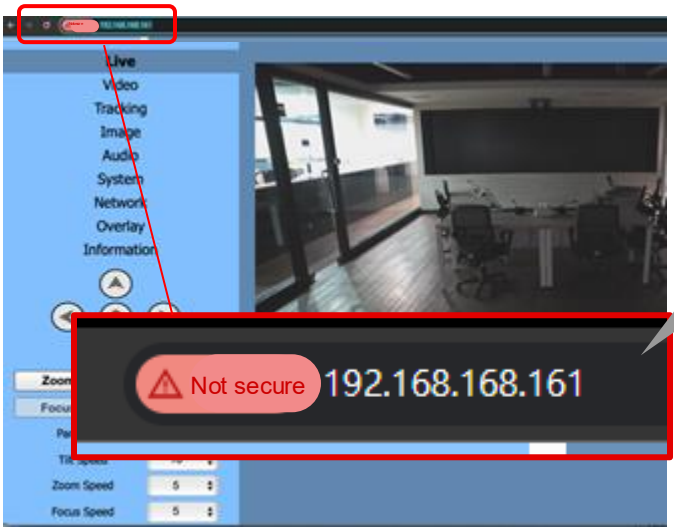

After the camera restarts, enter the modified IP address and log in to the camera settings page.

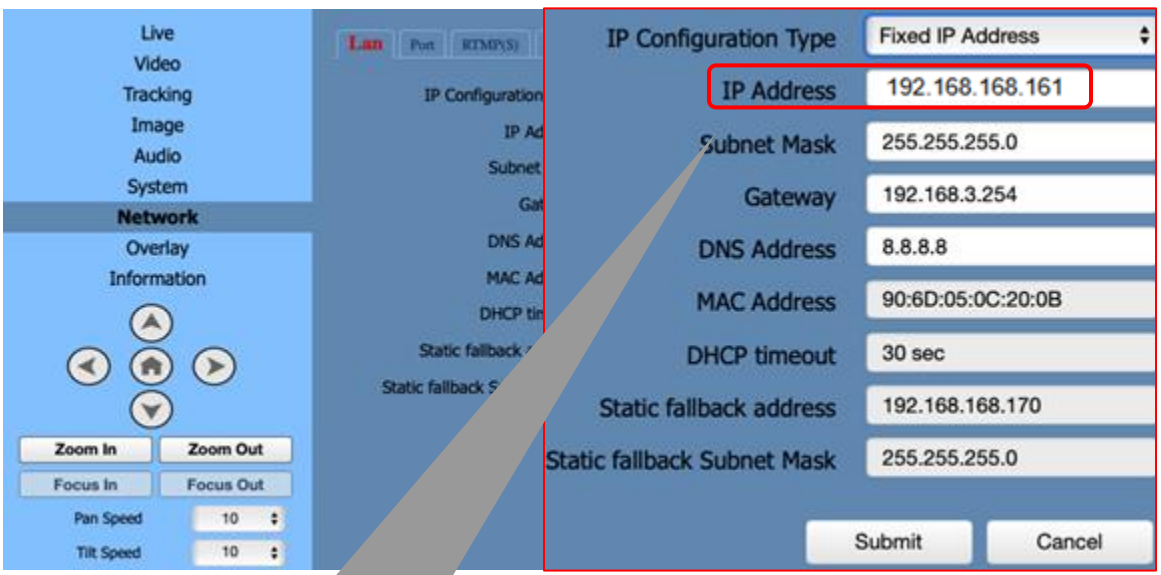

Click Network Settings in the left column and confirm whether it is the modified IP. The settings are now complete.



BXB Electronics Co., Ltd.

6F-1, No.288-5, Xinya Rd., Qianzhen Dist., Kaohsiung City 80673, Taiwan

TEL/ +886(7)9703838

FAX/ +886(7)9703883

Website/ www.bxbsystem.com

© Copyright 2025 BXB Electronics Co., Ltd.