Graphical Control Software CCU Activation Instructions




1.Supply power to the unit and it will automatically turn on. If it does not turn on, please press the power button (orange light > blue light).




2.Connect the control unit' s HDMI output to the screen, and the startup process will be initiated when the unit is on.




3.Set the display language by connecting the mouse.

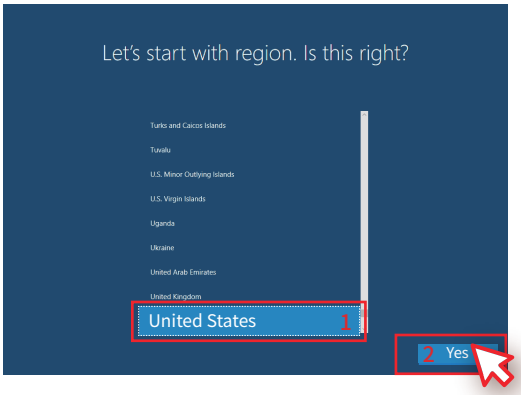


4.Select the area where the unit is located.

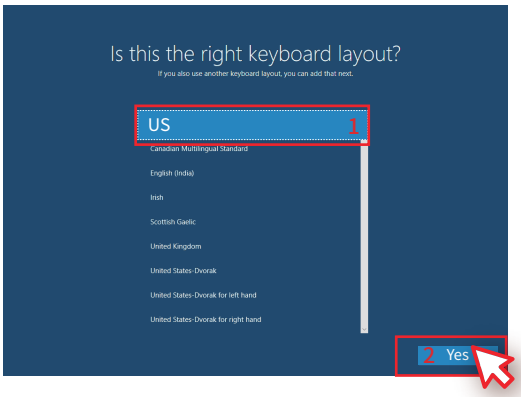

5.Choose keyboard configuration.

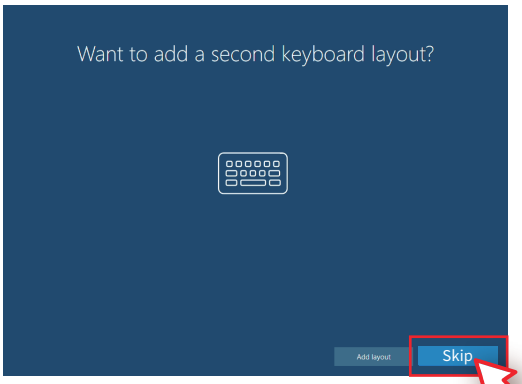

6.Add a second keyboard configuration based on your needs. If there is no need, you can select "skip" to proceed to the next step.

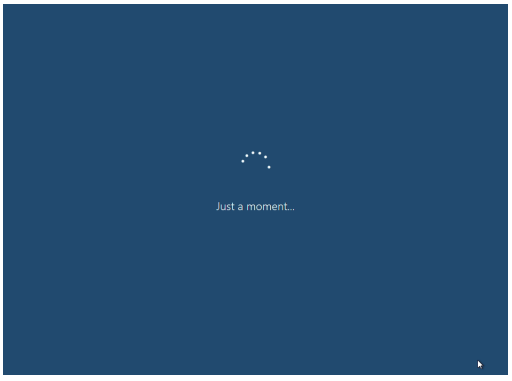

7.After completing the setup, the unit will restart.



8.The activation process will continue after the system restarts.

Graphical Control Software CCU Activation Instructions




9.When the message "Please insert a BXB licensed USB to activate the software" appears on the screen, please use BXB USB flash drive to activate it.




10.Connect the BXB USB flash drive to the unit’s USB port, the system will begin installing the software.




11.After the software installation is complete, the unit will restart.

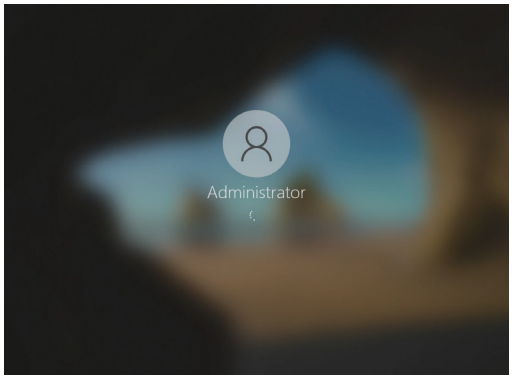


12.It will automatically enter the operating system after the unit has restarted.

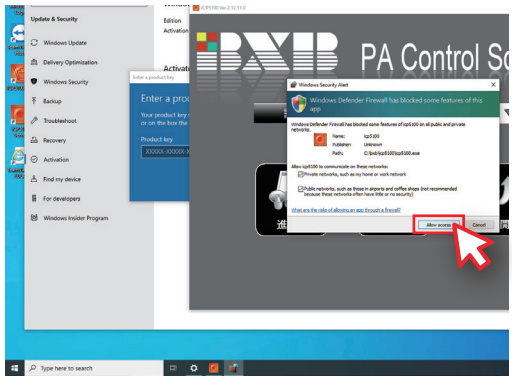

13.Once enter the system, the graphical control program will be automatically activated. Please use the mouse to enable the firewall permissions.

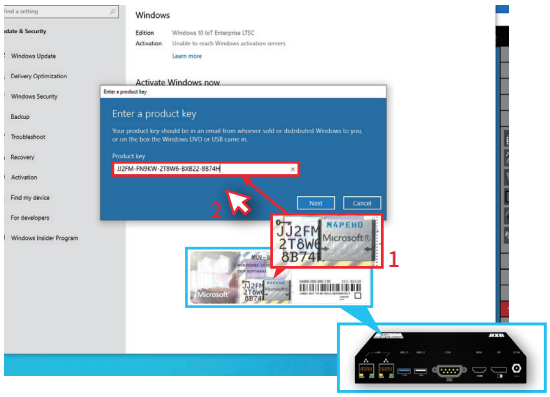

14.Enter the product key on the activation window (scratch off the silver coating is required) to activate Windows.

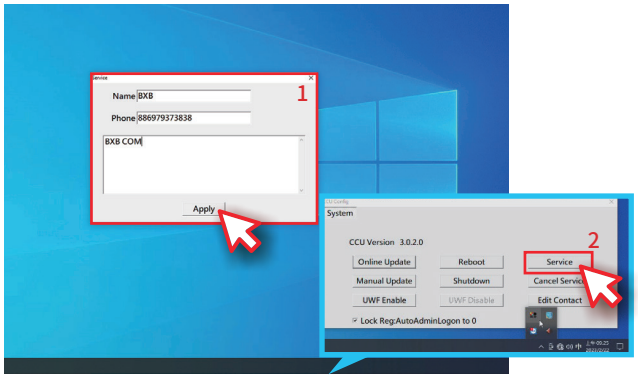

15.Enter the information in the "Service" program window, and press the service key to submit the request when the network is functioning properly.