BXB WIM-TR

Ultra High Frequency(UHF)Wireless Microphone



WIM-T



WIM-R

BXB Electronics Co., Ltd.

6F-1, No.288-5, Xinya Rd., Qianzhen Dist.,Kaohsiung City
806604, Taiwan (R.O.C.)

T +886 7 9703838
F +886 7 9703883


M bxb@bxb.tw
W www.bxbsystem.com

WIM-TR **Ultra High Frequency(UHF)Wireless Microphone**


Product Features


Appearance and various parts

Please charge the product fully before first time use.

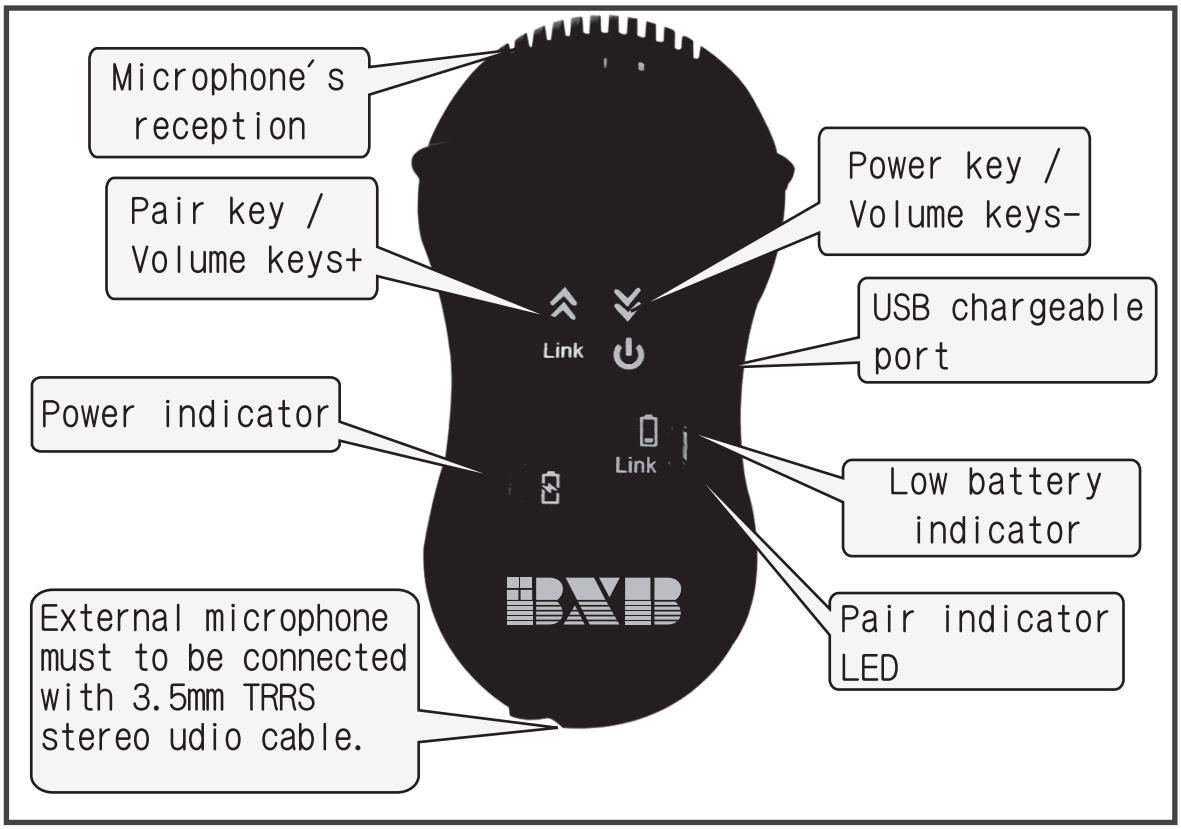

Wireless Lavalier microphone

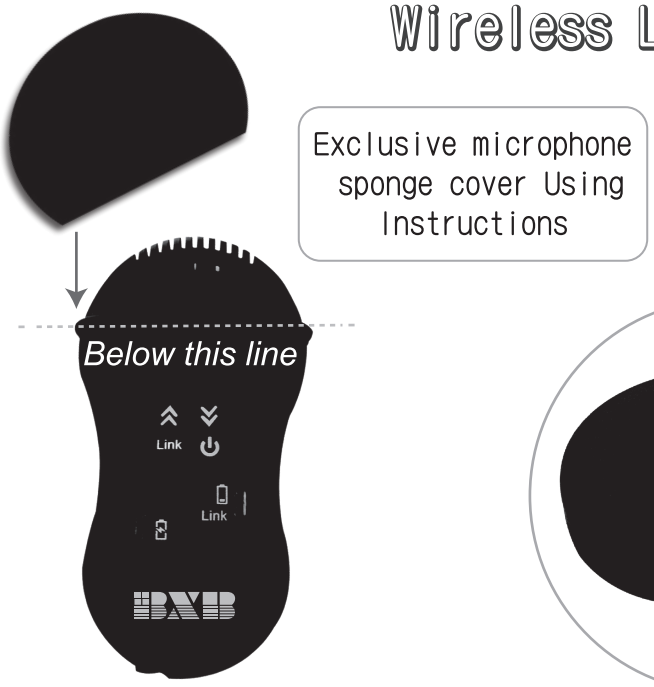

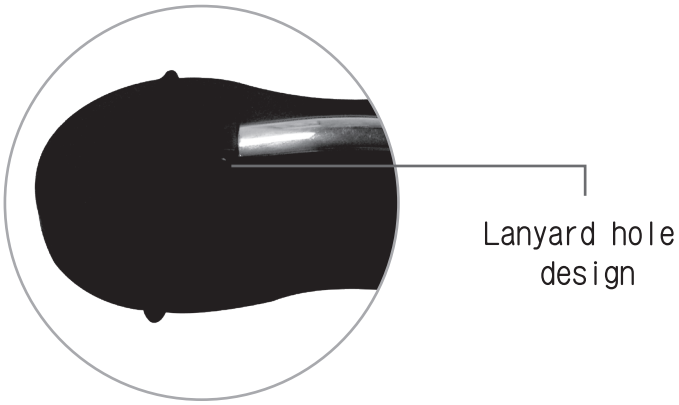

Please press one side of the sponge, then put on the other side.Make sure both side to the sponge are fixed to the microphone.

Usage

Key Description:

1.Power key :

This key is a multifunctional key

(1) Press it for 3 seconds to turn on the power.

(2) When power is on, long press the key for 3 seconds to shut the power down.

(3) When connection is on, short press the key to turn down its volume .

2.Pairing key :

This key is a multifunctional key

(1)When power is on, long press for 3 seconds to enter the pairing procedure.

※ If it takes over 10 seconds without success, it will return unconnected state.

(2)When power is on, short press the key to turn up its volume .

LED description :

1.Pairing LED

(1)Flashing indicates it is in diconnected status or the pairing procedure is failed ;

(2)Blink indicates it enters pairing mode;

(3)Constant light indicates a successful connection.

2.Low battery indicator : Indicates low battery when flashing.

3.Charging indicator LED: When charging , LED stays on. LED will be off if it is fully charged.

Charging instructions :

Use the USB charging cable to connect the power adaptor and USB charging jack. Once you have done it, the charging indicator LED will stay on until the machine is fully charged. When it's fully charged, the charging LED will be off. It takes about 3~4 hours for microphone to be fully charged.

※ **Please charge when the product is power off.**

ECO features :

◎ If there isn't any audio input for 3 minutes, its power will be automatically turned off.


WIM-R Wireless audio receiver

Product Features

Appearance and various parts

Please charge the product fully before first time use.

(Figure and various parts)

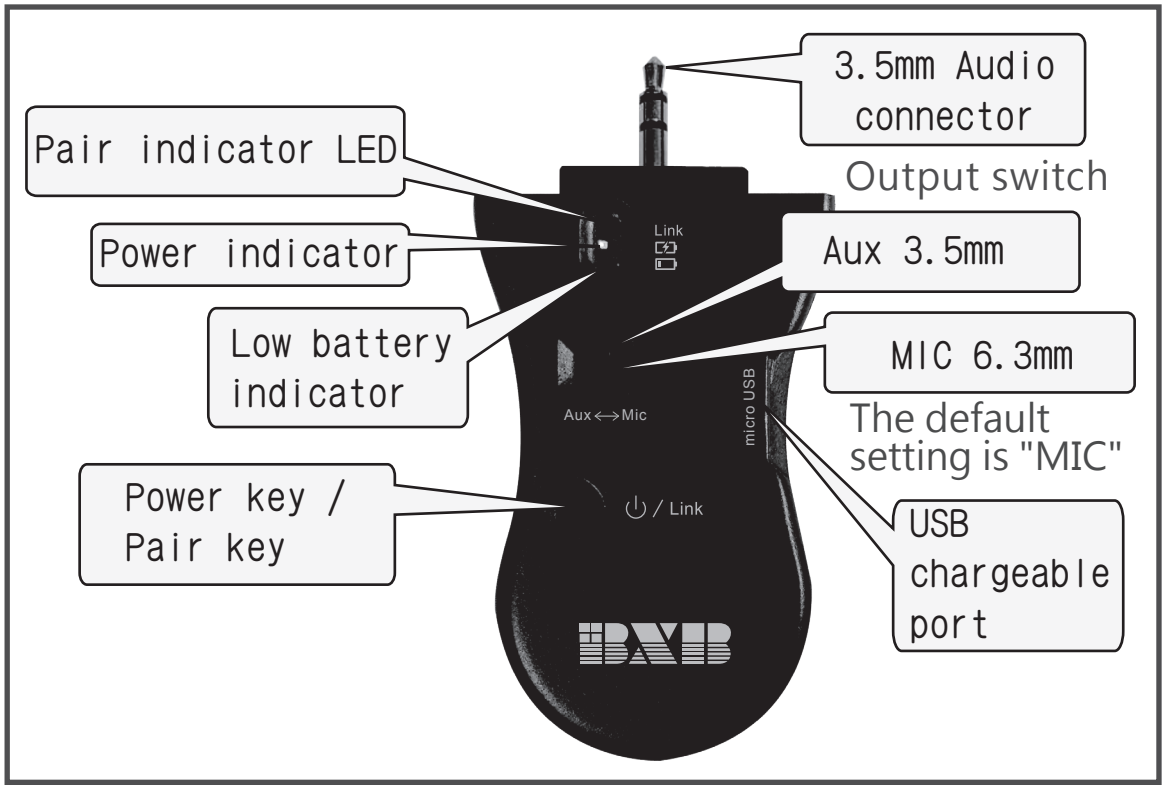

Wireless audio receiver

Usage

Key Description :

1.Power key /Pairing key:

This key is a multifunctional key

(1)Press it for 3 seconds to turn on the power.

(2)When power is on, long press the key for 3 seconds to shut the power down.

(3)When power is on, short press the key to pair.

LED description :

1.Pairing LED :

(1)**Flashing** indicates it is in diconnected status or the pairing procedure is failed

(2)**Blink** indicates it enters pairing mode ;

(3)**Constant light** indicates a successful connection。

2.Low battery indicator : Indicates low battery when flashing.

3.Charging indicator LED: When charging , LED stays on. LED will be off if it is fully charged.

Charging instructions :

Use the USB charging cable to connect the power adaptor and USB charging jack. Once you have done it, the charging indicator LED will stay on until the machine is fully charged. When it's fully charged, the charging LED will be off. It takes about3~ 4 hours for microphone to be fully charged.

※ **Please charge when the product is power off.**

ECO features :

◎ When there isn't any connection , it will automatically shut down itself.

◎ When the pairing procedure succeed, the unit will automatically store the current lavalier wireless microphone's pair information. Later, when using the same microphone, it will be paired and connected automatically without any additional action.

Instructions

1.(Shown) PA-side plug the wireless receiver amplifiers.



When using 3.5mm audio terminal, output terminal switch need to be pushed to Aux 3.5mm terminal; When using 6.3mm terminal (with audio adapter connected), output terminal switch need to be pushed to MIC 6.3mm terminal.

2.On both wireless microphone and wireless receivers, long press the power button for three seconds to turn on each of them.

3.Once the pairing procedure succeed, pairing LED will stay on, otherwise it will blink.

※ The product has already been paired by default.

※ If you want to start pairing procedure or retry pairing procedure, long press lavalier wireless microphone's pairing button for three seconds util the LED flashs. Meanwhile, press the wireless receiver's pairing key as well to complete pairing procedure.
Once the pairing procedure succeed, pairing LED will stay on . If pairing procedure takes more than 10 seconds without any success, the pairing LED flashes and user can then retry pairing procedure again.

※ This system only support one paired microphone in use simultaneously. If you want to use another microphone, please do pairing procedure with it again.

4.When in use,the system's volume can be directly controled by clicking on board Up/Down button.

5.When finish using microphone, press the power button for 3 seconds to shut it down .


※ The product has Eco powe-saving features. If lavalier wireless microphone couldn't detect audio input within 3 minutes, it will automatically shut down. If the wireless receiver is not connected with any microphones, it will automatically shut down.

Suggestion


1. For best audio/voice quality, the prefered distance between mouth and microphone is about 7 cm.



2. Do not hold microphone vertically and downward, otherwise it will not receive voice and sound.

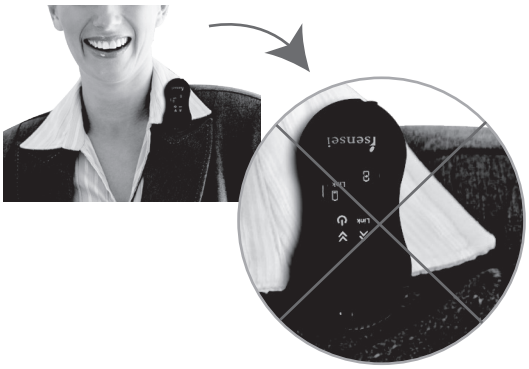


3. System's volume can be directly controled from microphone's on board function. User can easily adjust the volume accordingly.

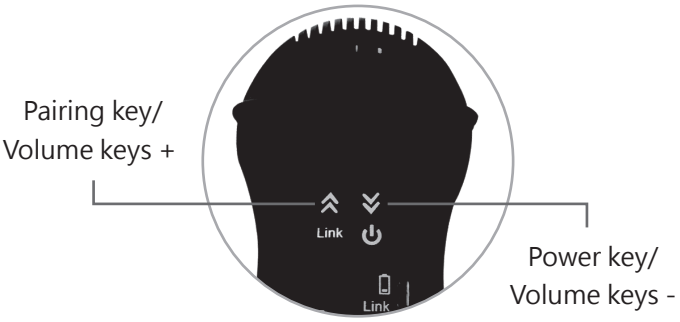

4. Use of external chest/ neck MIC.

For example, when user's clothing is without collar where lavalier MIC is difficult to be put on directly. In such circumstance, it's recommended to use an external MIC.

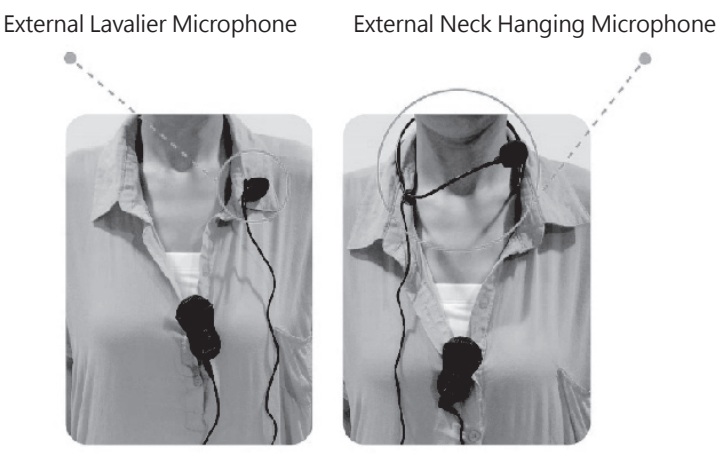

Accessory Description



3.5mm to 6.3mm
Audio adapter



Lavalier Microphone
Chest microphone
(option)



Shock & crash resistant carry case.(Personal accessory.100% clean and healthy.)



Power adapter with
USB ports



USB cable



Exclusive microphone
sponge cover x 2

Specification

Wireless Lavalier microphone	
Frequency	2400MHz～2483.5MHz
Frequency response	20Hz～20KHz
Transmit rate	2Mbps data rate
Sample rate	44.1KHz/16bit
Transmission distance	15m～20m(Depending on the environment of use)
SNR	-91db (A-weighted)
Latency	<25ms
Battery	3.7V Li-battery
Charging time	3hours
Dimension	74mm×42mm×23mm
Weight	20g

Wireless audio receiver	
Frequency	2400MHz～2483.5MHz
Frequency response	20Hz～20KHz
Audio Out Power	25mW(load impedance：16Ω)
SNR	-91db(A-weighted)
Battery	3.7V Li-battery
Charging time	2hours
Dimension	94mm×48mm×14mm
Weight	28g

Trouble shooting

1.Both lavalier wireless microphone and receiver's power had been turned on, but still no sound ?

A-1 : Please make sure the product is not out of battery .

A-2 : Check the pairing LED is flashing or not.
If it's flashing, please do pairing procedure again.

2.Why the devices shut down itself automatically ?

A : The product has Eco power-saving features. If lavalier wireless microphone couldn't detect audio input within 3 minutes, it will automatically shut down. If the wireless receiver is not connected with any microphones , it will automatically shut down.

※ If the problem is not solvable, please contact customer service for help.

3.Can this system use multiple microphones simultaneously?

A : This system only support one paired microphone in use and it's free from others' interference. The latest pairing microphone will be set as default microphone.

4.After all the settings is done, why does the amplifier have abnormal noise or couldn't turn up the volume when using?

A : Make sure the switch of Wireless audio receiver is seted correctly. The default setting is MIC(6.3mm connector used) , if you are using Aux 3.5mm connector, please switch to Aux .

※ Notes : BXB ELECTRONICS CO., LTD. reserves the right to change the product's specifications and functions at any time without prior notice.

6F-1, No.288-5, Xinya Rd., Qianzhen Dist.,Kaohsiung City 806604, Taiwan (R.O.C.) T +886 7 9703838 F +886 7 9703883 M bxb@bxb.tw W www.bxbsystem.com

BXB Electronics Co., Ltd.

Model : _____

Date of purchase : _____

Additional Note

- This warranty card has 1 year of free repair service, starting from the date of purchase.
- When following occurs , no warranty of any kind are provided.

1. No valid warranty card is presented to our service assistant when repairing or the date of the purchase and shop's stamp is not available on the card.
2. Users make alterations by themself, improper usage or other human factors caused breakdowns .
3. Due to natural disasters or fires caused damage.
4. Any damage and failure caused by transporting and carrying after product has purchased.
5. Use consumables which are not provided by our company .
6. Natural aging of battery . (※ Can be sent back to us and have replacement with additional fees & charges)